


1	2	3	4	5	6	7	8		
<b>FI</b> SERO ALVAR KYTKENTÄKAAVIO		<b>EN</b> SERO ALVAR WIRING DIAGRAM		<b>SE</b> SERO ALVAR Elektrisk anslutning		<b>ET</b> SERO ALVAR ELEKTRISKEEM		<b>RU</b> SERO ALVAR Схема подключения	
GNYE	Keltainen/Vihreä	GNYE	Yellow / Green	GNYE	Guld/Grön	GNYE	Kollane / Roheline	GNYE	Желтый/Зеленый
BN	Ruskea	BN	Brown	BN	Brun	BN	Pruun	BN	Коричневый
BU	Sininen	BU	Blue	BU	Blå	BU	Sinine	BU	Синий
L	Vaihe 230 V	L	Phase (230V ~line)	L	Försörjingen 230 V	L	Faas (230V ~line)	L	Фаза общая 230 V
N	Pumpun syöttö	N	Neutral	N	Försörjning pumpen	N	Neutraal	N	Нейтраль общая
PE	Maa	PE	Earth	PE	Land	PE	Maandus	PE	Нейтраль
GND	Nolla - signaali	GND	GND reference for the signal	GND	0 - signalen	GND	0-signaal	GND	Нейтраль сигнала управления
Sign	Signaali 0-10 V DC	Sign	Control signal (0...10Vdc)	Sign	Signalen 0-10 V DC	Sign	Signaal (0...10Vdc)	Sign	Сигнал 0-10 V DC
MV.EC	EC Puhallin	MV.EC	EC fan motor (or Brushless)	MV.EC	EC Pumpen	MV.EC	EC pump	MV.EC	ЕС Насос
INV	Invertteri	INV	Inverter (or Drive) for EC motor control	INV	Inverter	INV	Inverter	INV	Инверторы
X1	Riviliitin	X1	Electr. terminal board (with user side terminals)	X1	Terminalblocket	X1	Riviliides	X1	Электрическая соединительная коробка 230/24V трансформатор
TRANSFORMER	230/24V muuntaja suojaeristetty	TRANSFORMER	Transformer 230V/24V with insulation protection (for power supply of any auxiliary equipment 24V.	TRANSFORMER	230/24V transformator, isolerad	TRANSFORMER	Transformaator 230V/24V isoleeritud	TRANSFORMER	Конденсационный насос с сигналом аварии
PUMP	Kondenssipummu hälytyksellä	PUMP	Condensate pump with alarm switch. Contact type/rating (no/nc): refer to the pump's manual	PUMP	Kondenspumpen med larm	PUMP	Kondentspump alarmiga	PUMP	Клапан охлаждения
YV1	Jäähdytysventtiili	YV1	Principal coil valve	YV1	Kylningsventilen	YV1	Jahutusventiil	YV1	Клапан отопления
YV2	Lämmitysventtiili	YV2	Secondary coil valve	YV2	Värmeventilen	YV2	Kütteventiil	YV2	Комнатный термостат
CR	Huonesäädin	CR	Remote control	CR	Rumskontrol	CR	Ruumi regulaator	CR	Выключатель безопасности
IG - 2P	Turvakytkin	IG - 2P	Thermomagnetic switch	IG - 2P	Säkerhetsbrytare	IG - 2P	Turvalüiti	IG - 2P	

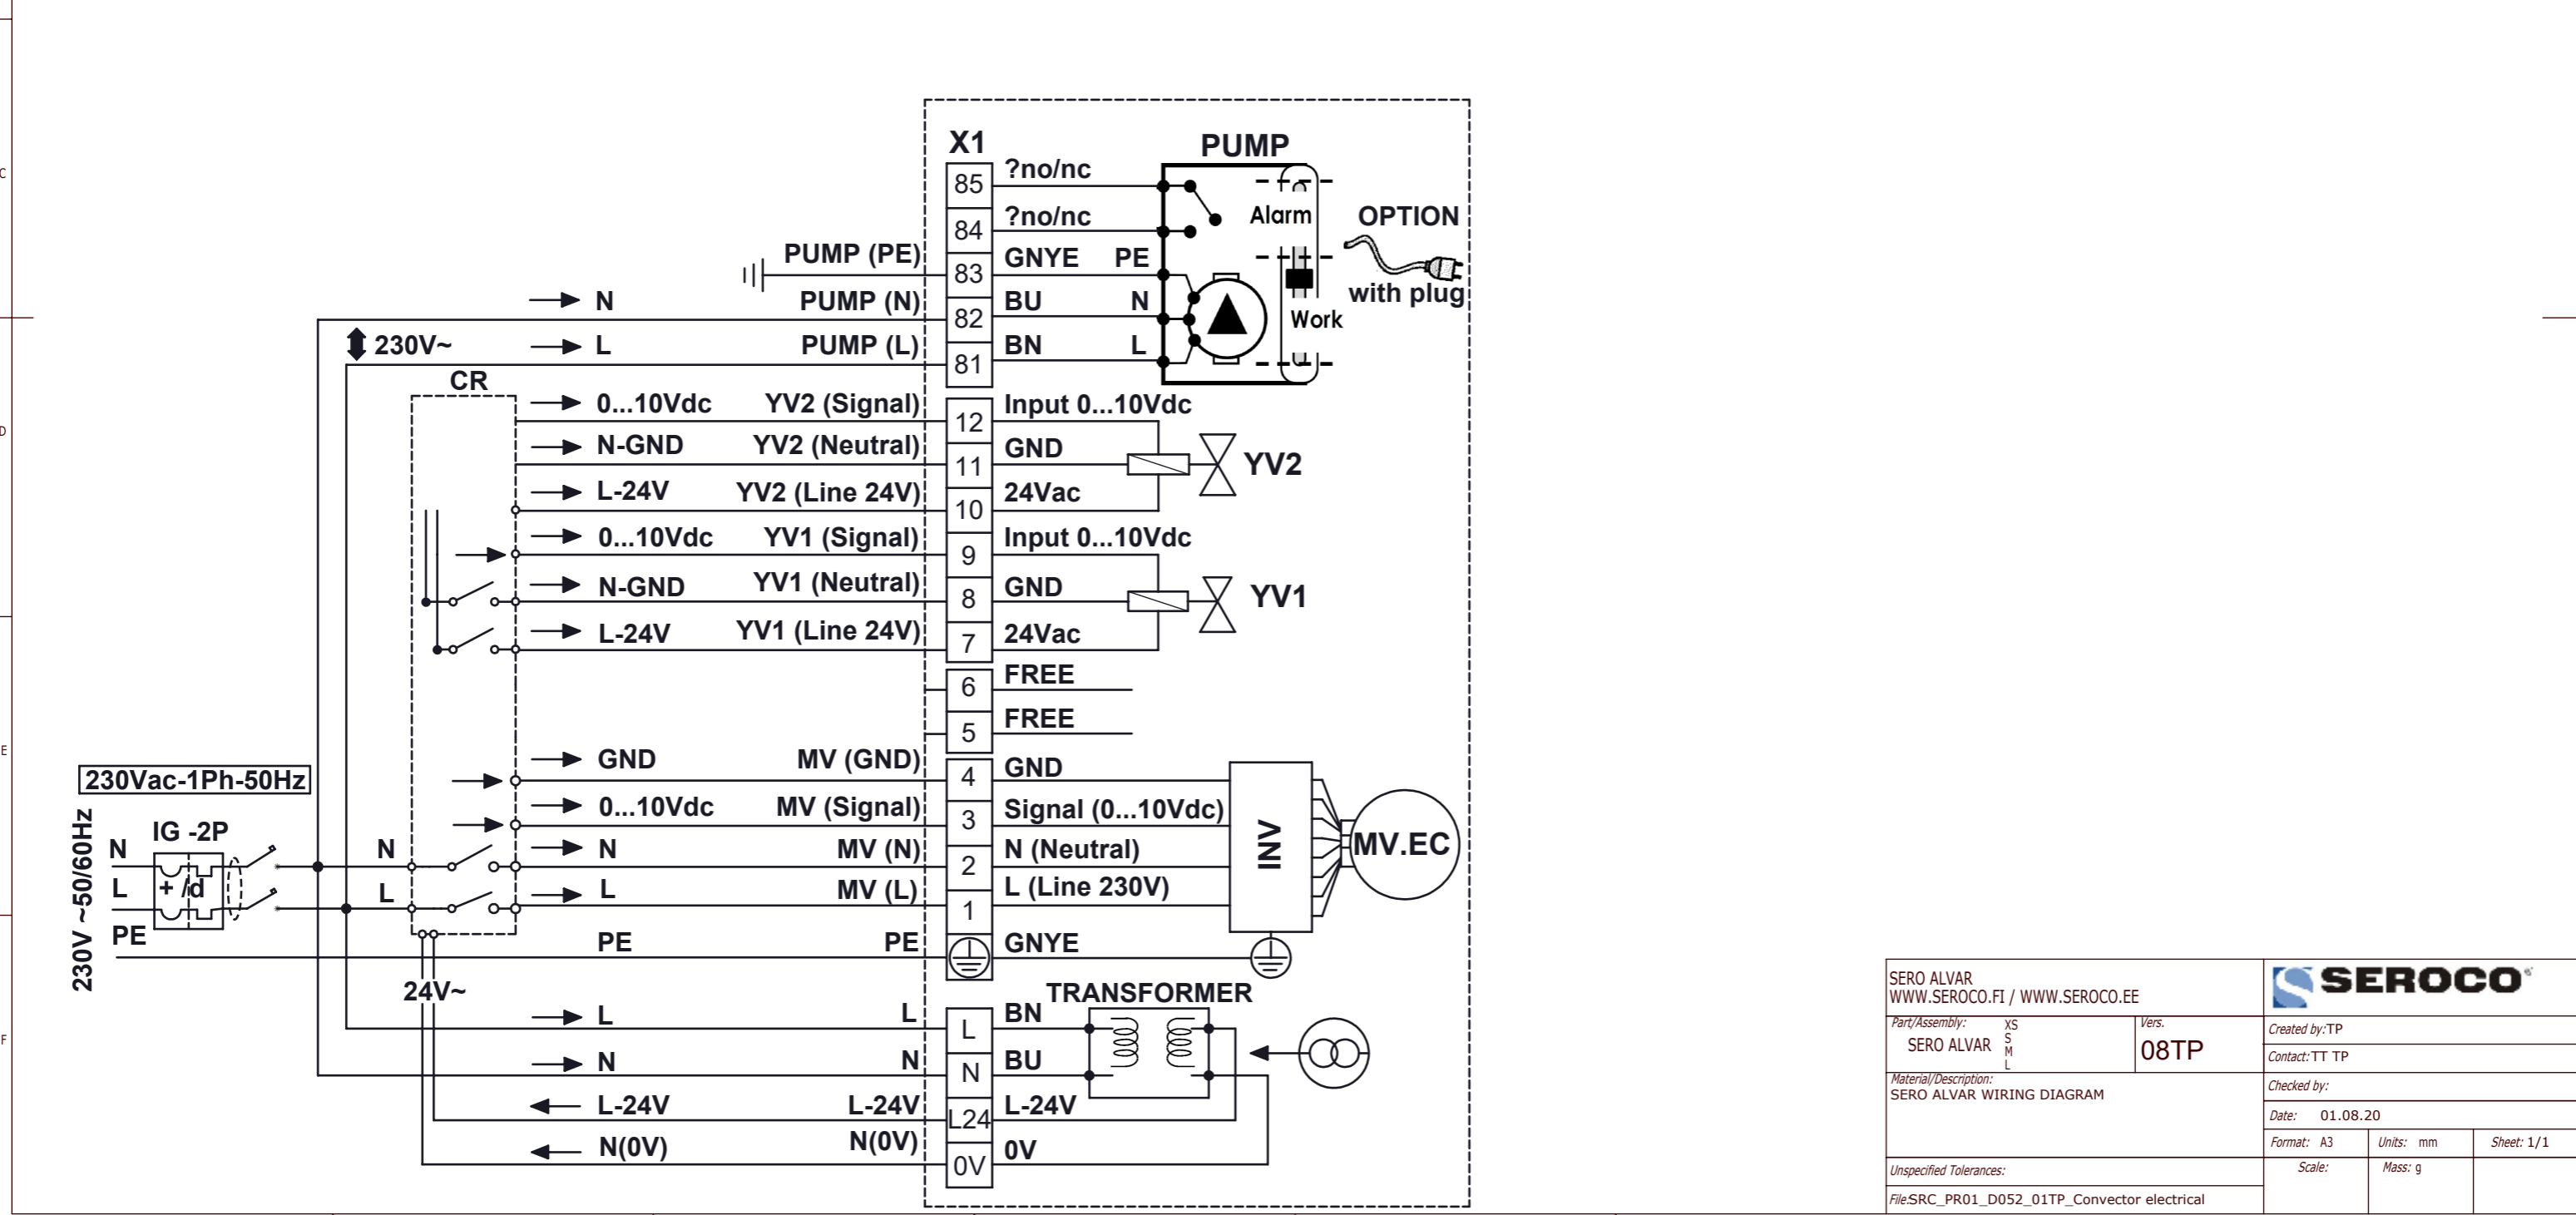

SERO ALVAR WWW.SEROCO.FI / WWW.SEROCO.EE		<b>SEROCO</b>	
Part/Assembly: SERO ALVAR S M L	Vers. <b>08TP</b>	Created by: TP Contact: TT TP	
Material/Description: SERO ALVAR WIRING DIAGRAM		Checked by: Date: 01.08.20	
Format: A3	Units: mm	Sheet: 1/1	
Unspecified Tolerances:	Scale:	Mass: g	
FileSRC_PR01_D052_01TP_Convector electrical			